

Ver 1.1

User Guide

9" Portable DVD Player
with USB, SD/MMC ports



Now you have purchased a MAXTEK® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty, you also have the peace of mind of a dedicated helpline and online support

AFTER SALES SUPPORT



GB 01270 508538 IRE 1800 995 036



www.quesh.co.uk

MODEL NUMBER: 60286

- 9" Portable DVD Player
- Remote Control
- Mains Adaptor
- In-Car Adaptor


3


**YEARS
WARRANTY**

Contents

- 1. Welcome Section
- 2. General Information & Safety Instructions
- 3. Contents & Features
- 4. Controls
- 6. Getting Started
- 6. Connecting to a TV
- 7. Charging the DVD player
- 7. Using USB, SD/MMC slot
- 8. Using as a Screen for a Device
- 9. Function Keys
- 10. System Setup

AFTER SALES SUPPORT

GB 01270 508538 IRE 1800 995 036

www.qesh.co.uk

MODEL NUMBER: 60286

- 9" Portable DVD Player
- Remote Control
- Mains Adaptor
- In-Car Adaptor

3

YEARS

WARRANTY

Welcome Section

Congratulations!



You have made an excellent choice with the purchase of this quality MAXTEK® product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Quesh.

We want you to be completely satisfied with your purchase so this MAXTEK® product is backed by a comprehensive manufacturer's 3 year warranty and outstanding after sales service through our dedicated helpline.

We hope you enjoy using this product for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty, please telephone our helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have a satisfactory proof of purchase (keep your receipt safe). This does not affect your statutory rights. However be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused and/or disassembled.

AFTER SALES SUPPORT	
 GB 01270 508538	IRE 1800 995 036
 www.quesh.co.uk	
MODEL NUMBER: 60286	

- 9" Portable DVD Player
- Remote Control
- Mains Adaptor
- In-Car Adaptor




General information & Safety Instructions


The remote control can be powered by 1 x 'CR2025' battery.

Do not dispose of batteries in your household waste.

Please contact your local authority for details on safe disposal.

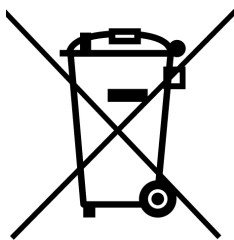

- Never throw batteries into a fire or expose to excessive heat source(s).
- If batteries are swallowed, please seek immediate medical attention.
- Always ensure correct +/- battery polarity when installing batteries.
- Do not recharge non-rechargeable batteries.

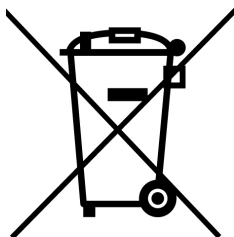

Electrical and electronic equipment (WEEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if the waste of electrical and electronic equipment (WEEE) is not disposed of correctly.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

AFTER SALES SUPPORT



(GB) 01270 508538 (IRE) 1800 995 036



www.qesh.co.uk

MODEL NUMBER: 60286

- 9" Portable DVD Player
- Remote Control
- Mains Adaptor
- In-Car Adaptor

3

YEARS
WARRANTY

Contents & Features

Contents

- 1 x 9" portable DVD player
- 1 x Remote control
- 1 x Mains adaptor
- 1 x In-car adaptor

Features

 
- 9" digital screen
- PAL/NTSC/Auto
- USB port
- SD/MMC port
- JPEG picture format supported
- DVD, AVI, MPEG4 & DIVX video formats supported
- CD audio format supported
- 9.5v mains adaptor (included)
- 12v in-car adaptor (included)
- Remote control (included)
- Headphone output
- AV output
- AV input

Region Encoding

In compliance with DVD patent requirements, the region code for this DVD player is region 2.




9" Portable DVD Player Controls Front Panel

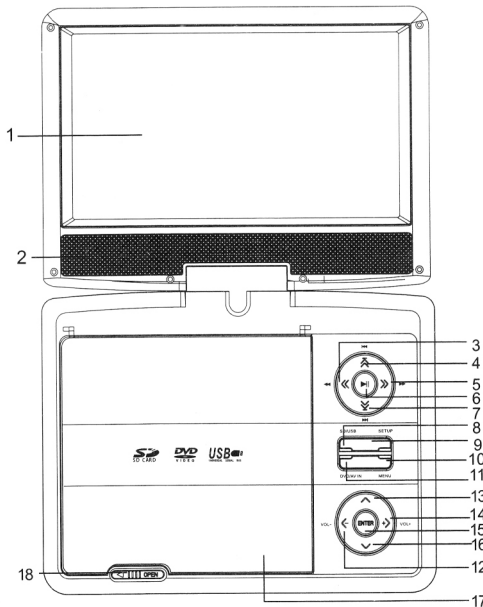


1. LCD DISPLAY
2. SPEAKER
3. PEV BUTTON
4. PREVIOUS BUTTON
5. FWD BUTTON
6. PLAY/PAUSE BUTTON
7. NEXT BUTTON
8. SD/USB BUTTON
9. SETUP BUTTON
10. MENU BUTTON
11. DVD/AV IN BUTTON
12. LEFT/VOLUME- BUTTON
13. UP BUTTON
14. RIGHT/VOLUME+ BUTTON
15. ENTER BUTTCN
16. DOWN BUTTON
17. DVD DOOR
18. OPEN BUTTON

 Side & Rear Panel

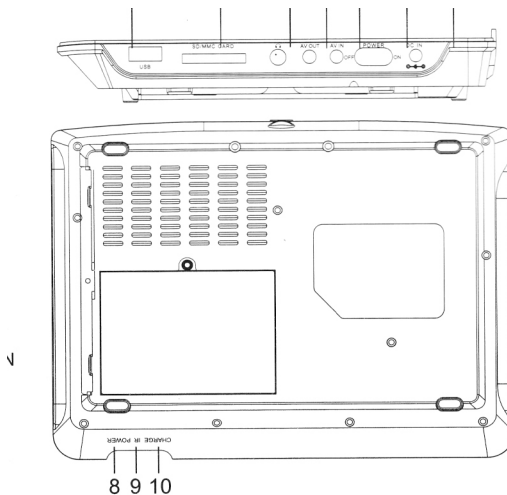

1. USB JACK
2. SD/MMC CARD JACK
3. HEADPHONE JACK
4. AV OUT JACK
5. AV IN JACK
6. POWER SWITCH
7. DC POWER INPUT JACK
8. POWER INDICATOR LIGHT
9. INFRARED RECEIVER
10. CHARGE

 Remote Control

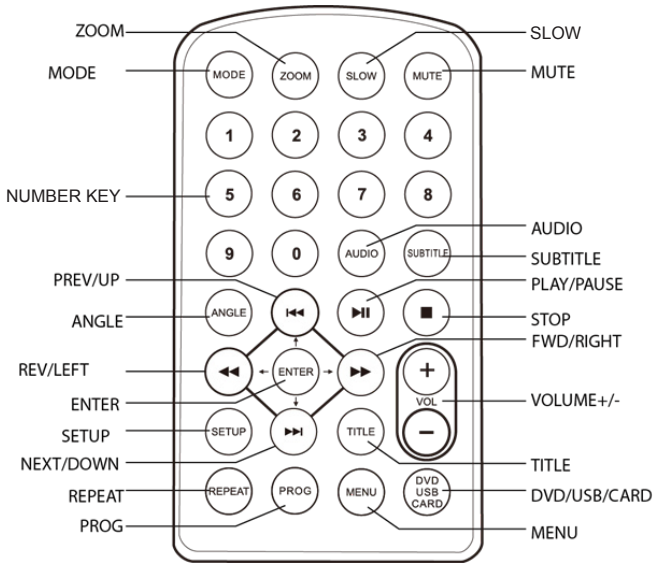

Battery Installation/removal



Please note: Battery type required is 'CR2025'


Getting Started

Basic DVD Operation

- Before first time use, open the disc cover and carefully remove and discard the white cardboard dust cover from inside the deck marked “Warning: Please take out this card before playing”
- Remove all transparent protection from the DVD player.
- Connect the mains power adaptor to the mains outlet and the DC in socket.
- Turn the power switch on the right-hand side panel to ‘on’ .
- Insert a DVD and press the play button.

Connecting to a TV

You can connect the DVD player to a TV so that your movies, pictures and music can be played on your larger screen.

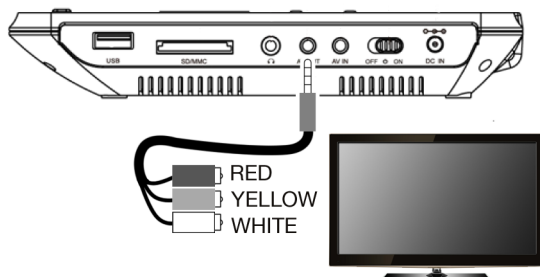

- Insert the 3.5mm Jack end of the 3.5mm to RCA cable into the AV out port on the DVD player.
- Connect the three RCA plugs to the corresponding coloured ports on your TV, normally located on the back.
- Choose the correct AV channel on your TV to view the content of the DVD player.

Please note: If your TV does not have a ‘RCA in’ port, you may need a RCA to SCART adaptor to use this function, if a SCART port is available.

Charging the DVD player

Connect either adaptor to charge the unit via the 'DC IN' port. This will take approximately 6 hour to fully charge. A red LED will indicate that it is charging or in need of charging if it's not connected to an adaptor. The LED will change to blue when fully charge.

The battery will last up to 3 hours of use.

Using the USB, SD/MMC slot

Memory Cards

- Connect the SD/MMC card into the named port on the side.
- Press and hold the 'DVD/USB/CARD' button to enter the DVD/USB/CARD mode.
- Use the up/down arrow keys to highlight 'Card Mode' and press the 'Enter' button to select it.
- Press the 'Play' button to play selected media from the memory card.

USB Memory Stick

- Connect the USB memory stick into the named port on the side.
- Press and hold the 'DVD/USB/CARD' button to enter the DVD/USB/CARD mode.
- Use the up/down arrow keys to select 'USB Mode' and press 'Enter'.
- Press the 'Play' button to play selected media from the USB memory stick.


Please note:

Make sure the memory card or USB stick storage is no bigger then 8Gb and that it is in FAT32 format. You can do this through a computer/laptop and that video file formats are in DVD, AVI, MPEG4 or DIVX.

Using as a screen for a device

Connecting a Device

You can connect the output of a device that uses RCA out to this DVD player and show the image or video feed.

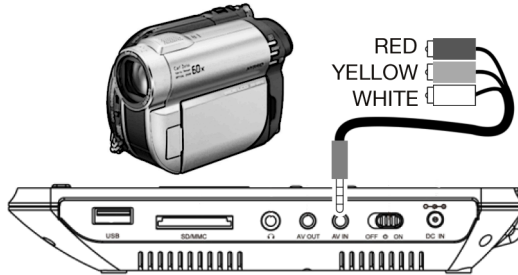

- Insert the 3.5mm Jack end of the 3.5mm to RCA cable into the 'AV in' port on the DVD player.
- Connect the three RCA plugs to the corresponding coloured 'RCA out' ports on your chosen device.
- Press 'mode' on the DVD player and switch it to 'AV in'. This will now show the connected live feed on the DVD player.

Key Functions

The functions of each key are detailed below. The main function keys appear both on the the remote control (RC) and the DVD player. Other less used keys however appear only on either the RC or DVD player.

Zoom	To enlarge the picture
Mode	DVD and external audio and video input conversion
Number Key	For inputting number digits
Prev/Up	To skip Backward/ To Move up in the Menus
Angle	Switch between multiple camera angles
Rev/Left	Reverse/moving left In menus
Enter	Enter is used for selecting
Setup	To Enter the Setup menu
Next/Down	To skip forward / to move down in the menus
Repeat	To repeat the selection
Prog	To play contents of disc in the order you want by, programming the track to be played
Slow	To slow the DVD down
Mute	To mute the DVD player
Audio	To change the audio setting.
Subtitle	To switch subtitles and turn on or off
Play/Pause	To play or pause
Stop	To Stop the DVD
FWD/Right	Forward/moving right In menus
Volume	To adjust the volume level
Title	To Show the DVD title
DVD/USB/Card	To select between DVD, USB and card input
Menu	To access the DVD player menu



Play / Pause



Stop



Skip Back Chapter



Skip Next Chapter



Rewind

(x2, x4, x8, x16, x32)



Fast Forward

(x2, x4, x8, x16, x32)

System Setup

Press **SETUP** on the remote control or DVD player to enter the Setup Menu. Here you will find the following options:

General Setup, Audio Setup, Dolby Digital Setup, Video Setup and Preference Page.

You can navigate through the menus with the arrow buttons and select an option with enter button on both the remote control and DVD player.

General Setup Page

FUNCTION	OPTION
TV Display	Normal/PS, Normal/LB, Wide.
Angle Mark	On / Off.
OSD Language	English, French, German, Italian, Spanish, Portuguese.
Captions	On / Off.
Screen Saver	On / Off.
Last Memory	On / Off.

Audio Setup Page

FUNCTION	OPTION
Speaker Setup	Downmix, LT/RT, Stereo.

System Setup

Dolby Digital Setup Page

FUNCTION	OPTION
Duel Mono	Stereo, L-Mono, R-Mono, Mix-Mono.
Dynamic	DRC slider, Off to Full.

Video Setup Page

FUNCTION	OPTION
Panel Quality	Quality Panel Setup.
Sharpness	High, Medium, Low.
Brightness	Range select -18 to +18.
Contrast	Range select -12 to +12.
Hue	Range select -9 to +9.
Saturation	Range select -9 to +9.

Preference Page

FUNCTION	OPTION
TV Type	PAL, NTSC, Auto.
Audio	Language selection list.
Subtitle	Language selection list.
Disc Menu	Language selection list.
Parental	KID SAF, G, PG, PG13, PGR, R, NC17, ADULT.
Password	On / Off, Change / Set Password.
Default	Reset

Specifications

Compatible Disc Formats	DVD, DVD-R, DVD+R/RW, CD, CD-RW
Compatible Video Formats	DVD, AVI, DIVX, MP4
Compatible Image Formats	JPEG, JPG
Panel Size	9 Inches
Frequency Response	20Hz to 20KHz
Video Output	1Vp-p75 0Hm unbalanced
Audio Output	1.8Vrms/10K 0Hm
Dynamic Range	Greater than 85Db
Laser	Semiconductor laser, Wave length: 650Nm/795Nm
Power Source	DC-9.5V - 1.5A
Power Consumption	14.3W
Operation Temperature	5-40°C
Battery Type	Lithium-Polymer
Battery duration	up to 3 hours
Battery Charge time	Approximately 6 hours
Car Adaptor Fuse	3A





Warranty Card

9" Portable DVD Player

60286

Please keep your purchase receipt together with your warranty card

Name: _____

Address: _____

 _____

Date of purchase: _____

Location of purchase: _____

Detailed description of malfunctions:

SERVICE HELPLINE

Qesh Ltd, 1 Solway Court, Crewe Business Park, CW1 6LD
UK/N.Ireland 01270 508538, Rep. Ireland 1800 995 036
web: www.qesh.co.uk - email: enquiries@qesh.co.uk

AFTER SALES SUPPORT



GB 01270 508538 IRE 1800 995 036



www.qesh.co.uk

MODEL NUMBER: 60286

- 9" Portable DVD Player
- Remote Control
- Mains Adaptor
- In-Car Adaptor

3

YEARS
WARRANTY

